


QUICK SETUP GUIDE



For full user manual or animated guide, please visit:
WWW.UCLEARDIGITAL.COM/USER-MANUALS/
or **CLEARLink** Mobile App

1. PAIR DEVICE TO PHONE

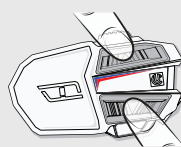

Power on the device. Press & hold the "Up" + "Down" buttons until LED blinks **blue** and **red**.



* Select the name of the UCLEAR device purchased in your mobile device's Bluetooth pairing screen.



Once paired, control unit will blink **blue**. Device is ready for calls and media streaming!



* When pairing UCLEAR to mobile devices you may see an option with "BLE" added to the device name. Do not select the "BLE" connection in this step.

2. DOWNLOAD CLEARLINK APP

Download & install **CLEARLink**, free from App Store (iOS) or PLAY Store (Android)


If you do not have a smartphone, you can still place calls and stream media from Bluetooth enabled phones. However, **CLEARLink** is needed for certain features and device configuration options to function. For assistance, contact UCLEAR Support.




3. PAIR DEVICE TO CLEARLINK APP



Home page

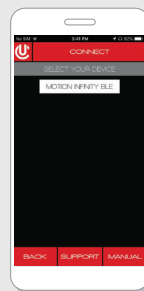

Connect device

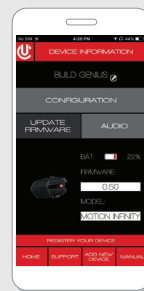

Device Information




Configuration + Full User Guides

* UCLEAR device must be paired to your mobile device before pairing to **CLEARLink**. Once paired to **CLEARLink**, please register your device for warranty and configure your preferences.


4. SPEAKER INSTALLATION

FULL FACE / MOTOCROSS HELMET

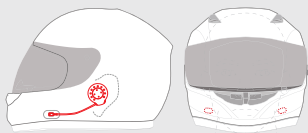

- Using included speaker mounting kit, locate speakers & mics per illustration.
- For best performance, adjust center of speakers directly over ear canals.
- Locate the mics behind cheek pads, aligned with mouth, using the included slotted small mounting rounds. Avoid either covering the mics too tightly or placement on air vents.

OPEN FACE / MODULAR HELMET

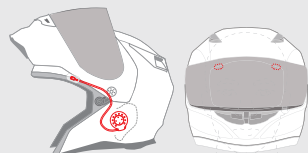

- Using included speaker mounting kit, locate speakers & mics per illustration.
- For best performance, adjust center of speakers directly over ear canals.
- Using small slotted mounting rounds, locate mics under liner in brim of helmet, aligned between temples and outside of eyebrows. Avoid placement in air vent channels.


5. DEVICE INSTALLATION



Ensure mounting area is cleaned of any dust or oils.



* Determine optimal mount location. Peel off protective film from adhesive and press down hard.

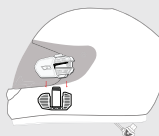

Dock the controller to the mount. Align the rails and slide down into place. You should hear a "click" when properly secured.



Plug speaker USB cable in all the way for a tight & weather proof connection. Tuck excess wire slack into the helmet lining or behind cheek pads.

* Note: Controller should only be placed on left side of helmet. Optimal location is low, along the jaw-line, near your left ear.

UCLEAR
DIGITAL

MOTION

SERIES

Speakers, Charging & Mounting Replacement Items



#111037

Pulse Pro 2.0 Premium
Speaker/Mic Kit (USB-C).
Speaker Mounting Kit
Included




#111043

Half Helmet Earbuds for
Motion Series (USB-C).
Speaker Mounting Kit
Included




#111040

Permanent Mount for
MOTION Series Only

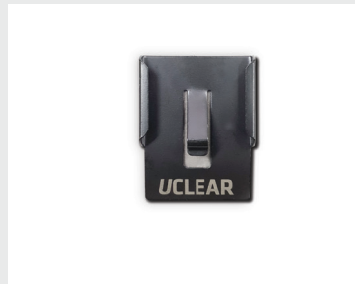

#111001

Classic Permanent Mount
for HBC, AMP &
MOTION Series, 2-PK

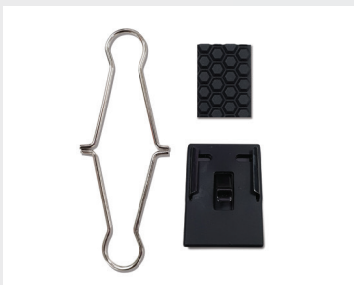

#111002

Temporary / Removeable
Mount for HBC, AMP &
MOTION Series



#111039

Universal Helmet
Speaker Mounting Kit



#111041

USB-C Charge / Data Cable
for MOTION Series Only



#111042

Universal Dual Port
AC / USB Charge Adapter
(2.1A & 1A ports)

COMING SOON: Custom Earbuds Adapter & Charge While Riding Adapter

See all UCLEAR Systems and Accessories at WWW.UCLEARDIGITAL.COM or Visit Your Local Authorized UCLEAR Digital Dealer